
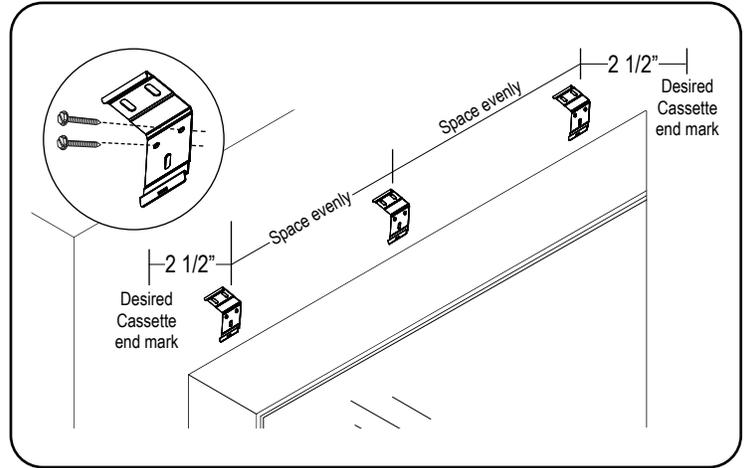


1. Install the Brackets


Important: Make sure the mounting surface is level. Brackets must be in line and level for shade to operate properly. Shim brackets if necessary.

1a. Small, Medium and Large Curved Cassette

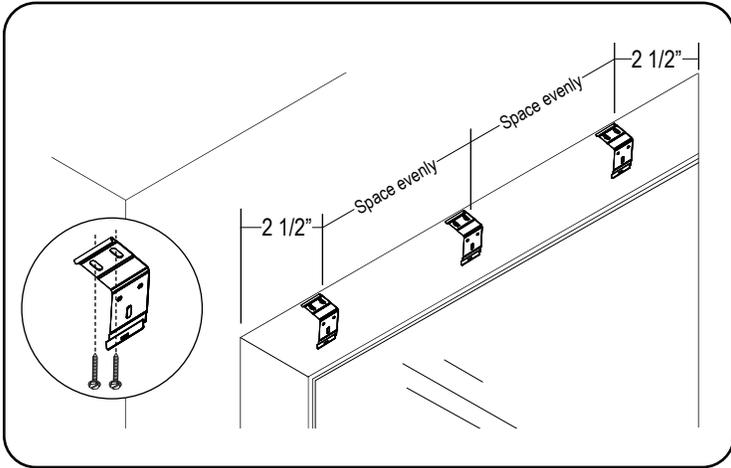


Inside Mount, install the brackets level and aligned to each other, using the screws provided.

Outside Mount, center the shade over the window opening at the desired height and mark the end of the clutch side of the shade. Measure the width of the shade fabric, and mark the width of the fabric plus 1 1/4" from the previously marked mark.

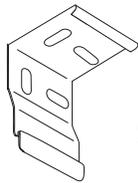



Small

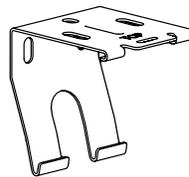

Medium / Large

Note: The Medium and Large curved Cassette uses a different bracket from Small versions for optimized performance.

1b. Square Cassette

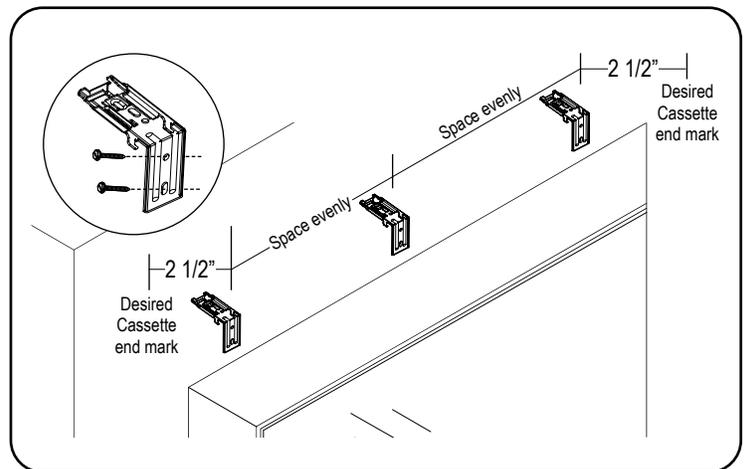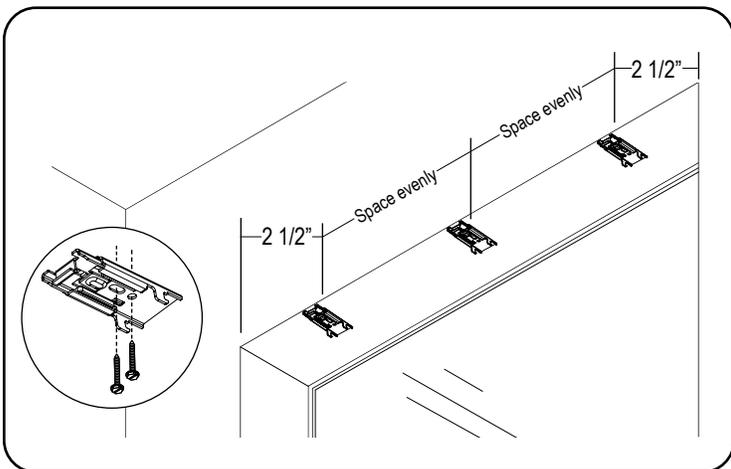

Inside mount (IB)

Outside mount (OB)


Inside Mount, install the brackets level and aligned to each other, using the screws provided.

Outside Mount, center the shade over the window opening at the desired height and mark the end of the clutch side of the shade. Measure the width of the shade fabric, and mark the width of the fabric plus 1 1/4" from the previously marked mark.


INSTALLATION INSTRUCTIONS

2. Install the Shade


2a. Small Curved Cassette

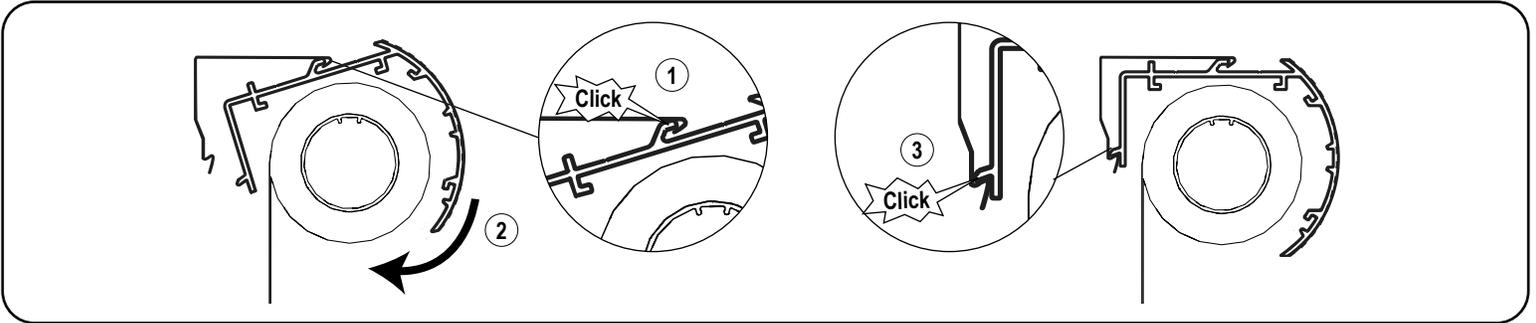


2b. Medium and Large Curved Cassette

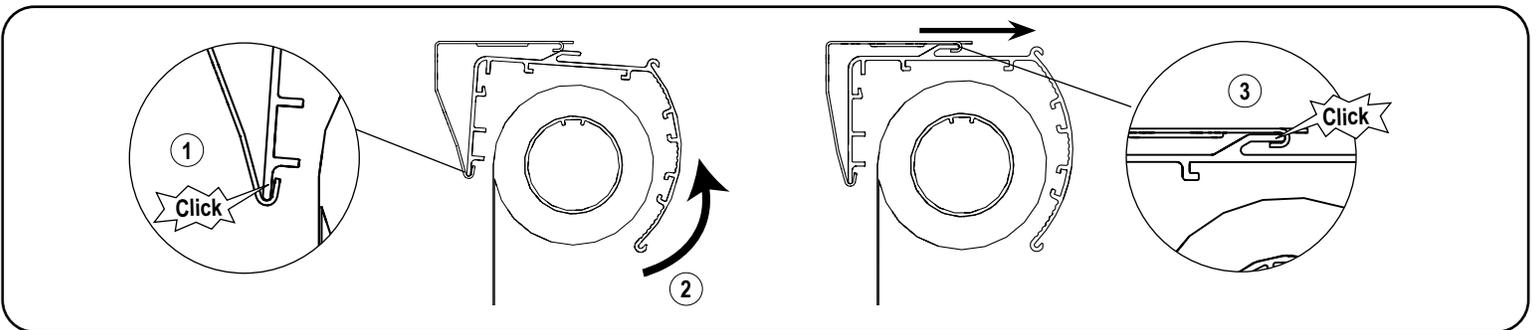

2c. Square Cassette

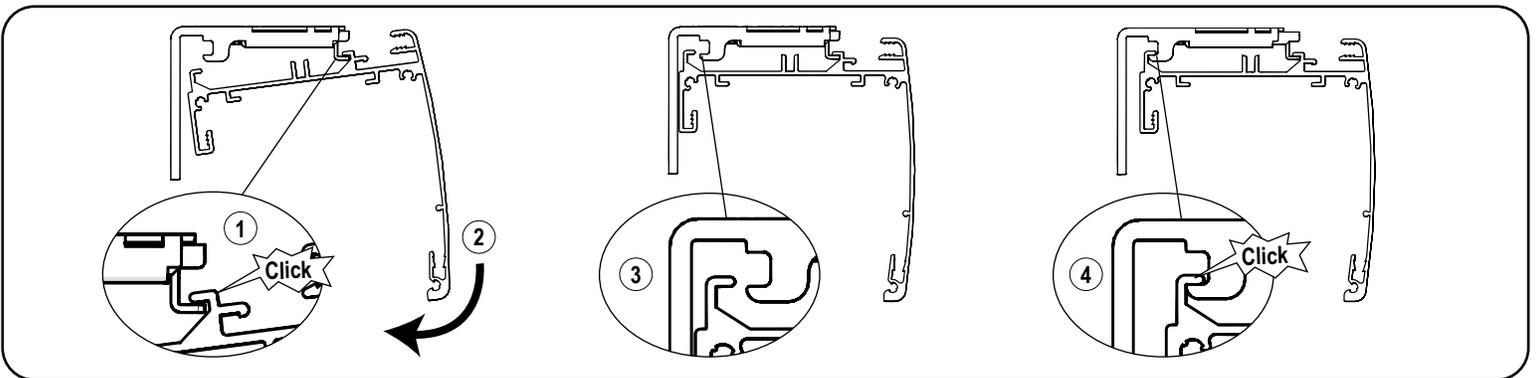

2d. AgileLift

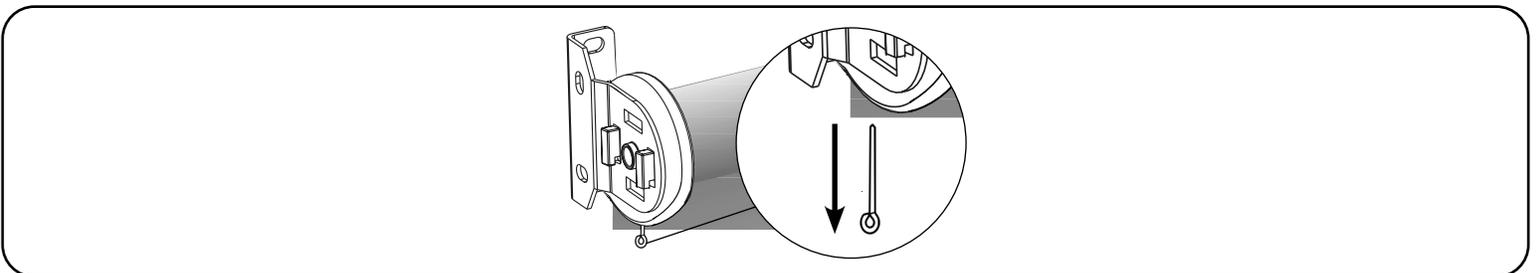


Important: Do not pull the lock pin until shade is securely assembled onto the brackets.

Note: Illustration shown under Open Roll without top treatment, same concept applies with shade made with Cassette.

With the shade installed, remove the lock pin prior to operating by pulling it downward. If for any reason needs to make an adjustment on the position of the installation brackets or remove the shade; raise the shade and **insert the lock pin prior to disengaging the shade** from the installation brackets.


INSTALLATION INSTRUCTIONS

3. Installing the Beaded Cord Tensioner (Clutch Option Only)

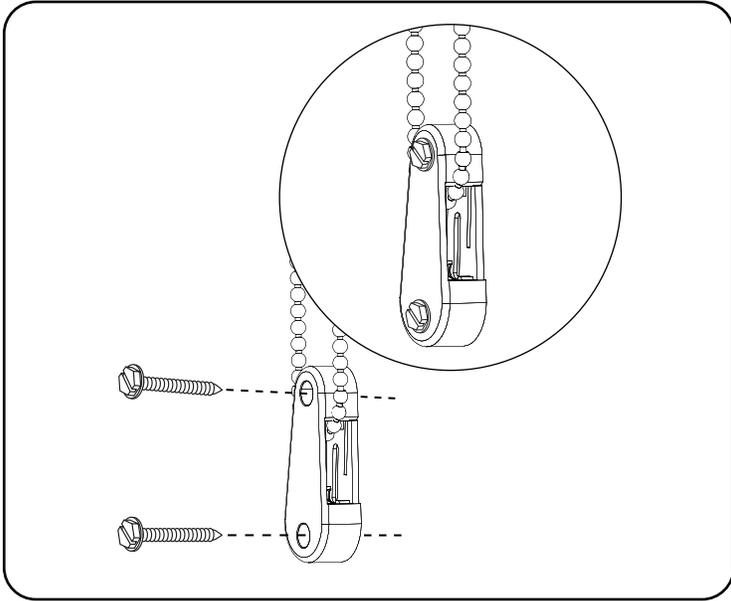

Inside mount (IB)


Pull tension device down until the chain is taut and then move the tension device up approximately 1/8". Mark the upper and lower screw hole and install the device with the screws provided. **Important:** Do Not Over-Tighten.

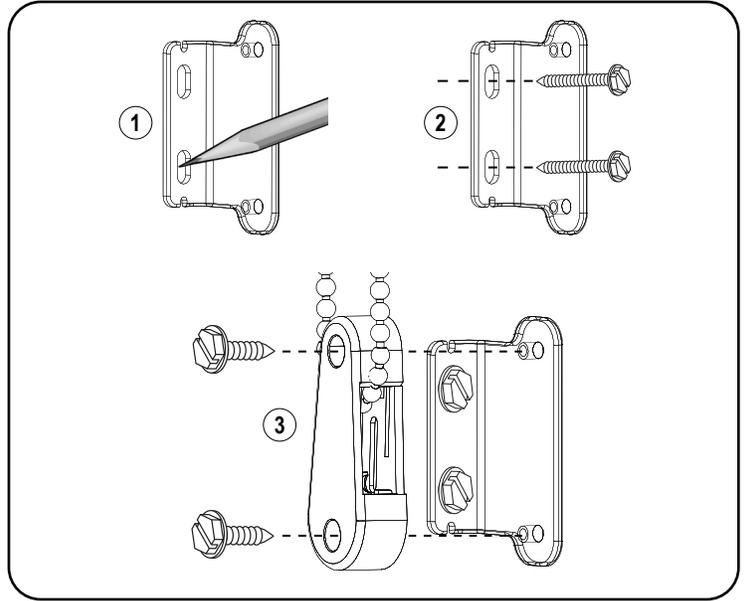


Outside mount (OB)

4. Removing the Shade (Only if Necessary)

4a. Small Cassette

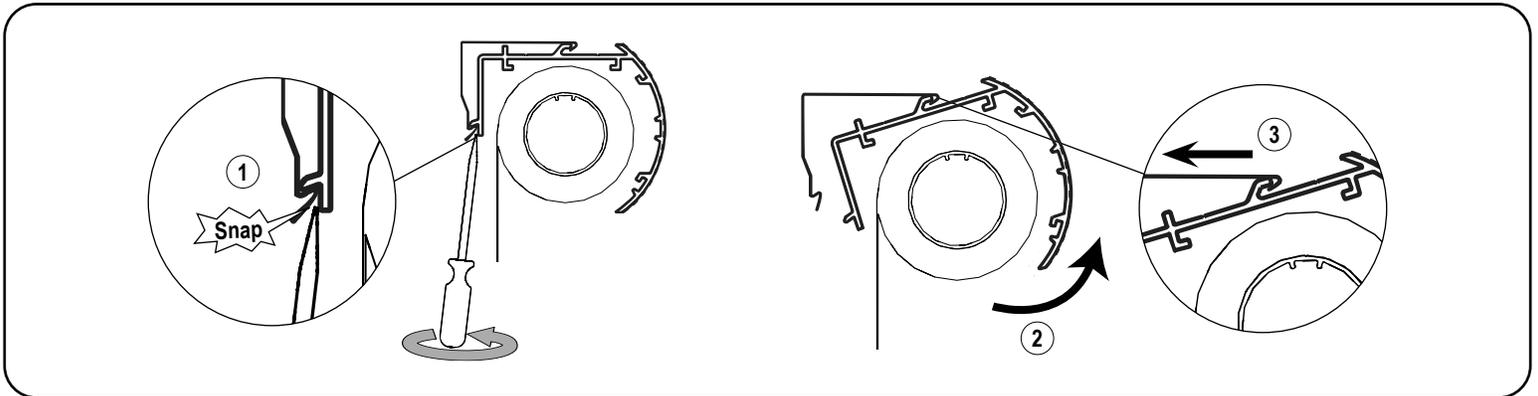


4b. Medium and Large Cassette

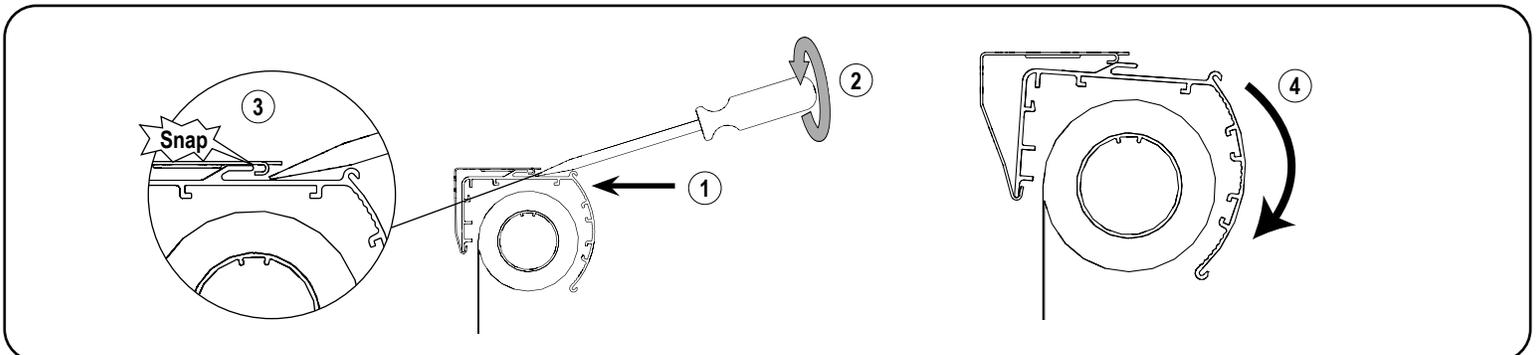


INSTALLATION INSTRUCTIONS

4. Removing the Shade (Only if Necessary)

4c. Square Cassette

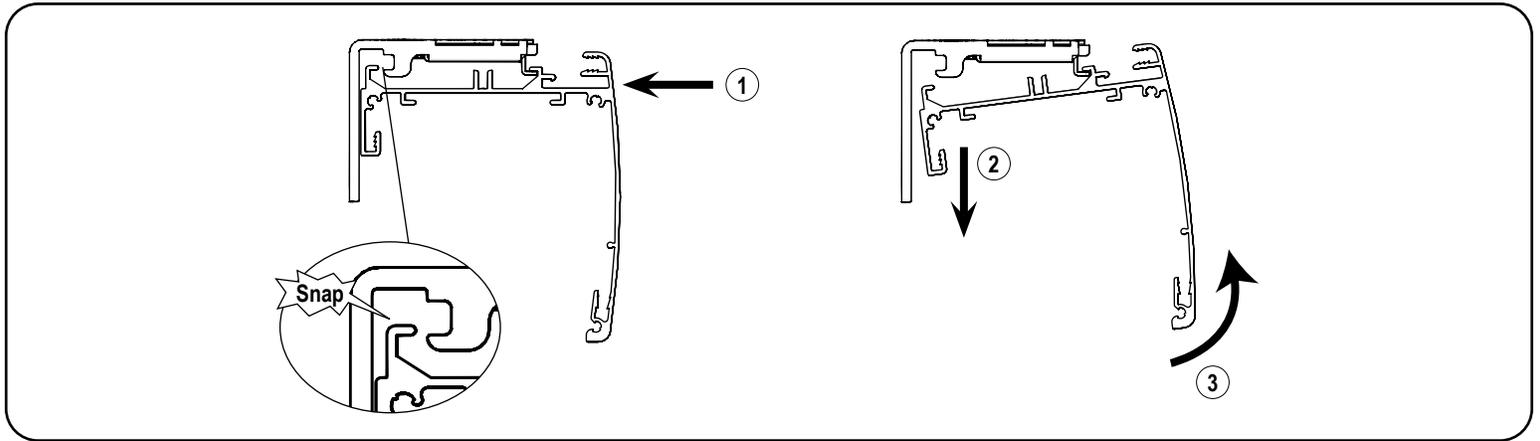

4d. AgileLift

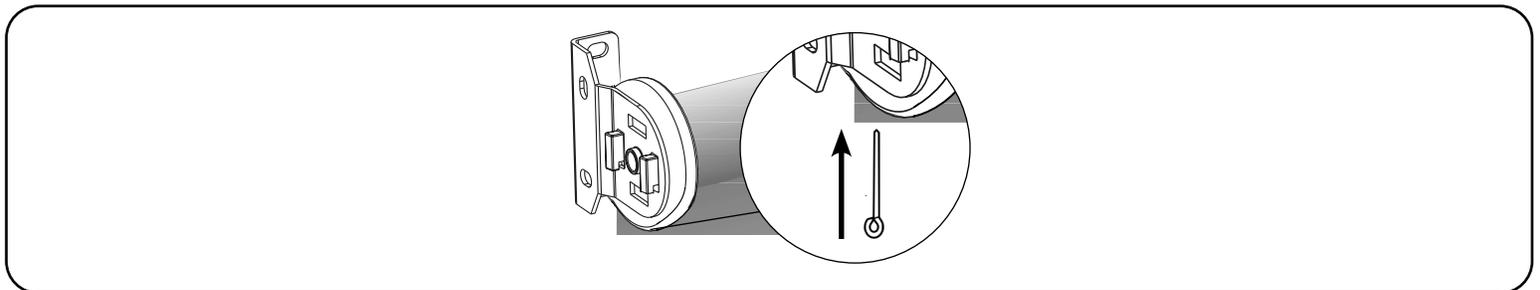

Note: Illustration shown under Open Roll without top treatment, same concept applies with shade made with Cassette.

If for any reason needs to make an adjustment on the position of the installation brackets or remove the shade; raised the shade and **insert the lock pin prior to disengaging the shade** from the installation brackets.

Child Safety

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.

WARNING/ADVERTENCIA	
5.1.3	Rev. 5/18 Print 5/18
	Window Blind Cord Can STRANGLE Your Child. To prevent strangulation, purchase cordless products or products with inaccessible cords.
	La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.

